



Step1 CLICK

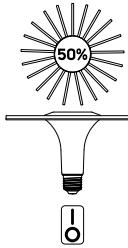

Step2 CLICK

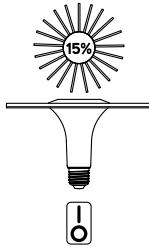

Step3 CLICK

- الخطوة الأولى: قم بتشغيل المصباح للحصول على ١٠٠٪ من شدة الضوء.
- الخطوة الثانية: قم بإطفاء المصباح وخلال أقل من ثلث ثوان قم بالتشغيل مرة أخرى للحصول على ٥٠٪ من شدة الضوء.
- الخطوة الثالثة: قم بإطفاء المصباح مرة أخرى وخلال أقل من ثلث ثوان قم بالتشغيل مرة أخرى للحصول على ١٥٪ من شدة الضوء.

كرر الخطوات المذكورة أعلاه من أجل تغيير شدة الضوء من ١٠٠٪ - إطفاء / ٥٠٪ - إطفاء / ١٥٪ - إطفاء / ٥٪ - إطفاء / ١٪

ملاحظة:

المصباح سيعود بذريعن آخر درجة سطوع تم اختيارها لتصبح افتراضية، فعند إطفاء المصباح وتنشئيه في وقت لاحق (أكثر من ٣ ثوان) سيعمل على درجة السطوع التي تم اختيارها سابقاً، ويمكن بكل سimplicity تغيير شدة الضوء بإعادة الخطوات المذكورة أعلاه من ١ إلى ٣.

Step 1: Switch on the lamp for %100 brightness.

Step 2: Switch off the lamp, and within about three seconds switch on again to get %50 brightness.

Step 3: Switch off the lamp again, and within about three seconds switch on once more for %15 brightness.

Repeat above mentioned steps to change the brightness -%100off / -%50off / -%15off / -%100off / -%50off / -%15off

Note:

The lamp has a memory, it will save the last set step as default, so when the lamp is switched off then switched it on again after some time (more than 3 seconds) It will be on the step which set before. you can simply change the brightness by repeating above mentioned steps from 1 to 3.