

INSTALLATION INSTRUCTIONS

تعليمات التركيب

وحدة إضاءة غرس

SPIKE PROJECTOR LUMINAIRE

Attentions:

1. Lamp should be installed by professional electrician.
2. Check the power switch has been turned off.
3. Please read this user guide carefully before installation and keep for future reference.
4. If the cable or flexible external wire of this lamp is damaged, it must be replaced exclusively by the manufacturer, its service agent or a qualified technician to avoid a hazard.
5. Terminal block not included. Installation must be carried out by a qualified technician.


تنبيهات:

1. يجب ان يتم تثبيت المصباح بواسطة كهربائي محترف.
2. تحقق من إيقاف تشغيل مفتاح الطاقة.
3. يرجى قراءة دليل المستخدم بعناية قبل التثبيت والاحتفاظ به للرجوع اليه في المستقبل.
4. في حالة تلف الكبل أو السلك الخارجي المرن لهذا المصباح ، يجب استبداله حصريا من قبل الشركة المصنعة أو وكيل الخدمة الخاص به أو فني مؤهل لتجنب حدوث خطر.
5. المنتج لا يتضمن صندوق التوصيل . يجب أن يتم التثبيت من قبل فني مؤهل.

Model	ILSSPMOPJF04	ILSSPMOPJF04	الموديل
Power	Max.9W	أقصى قدرة ٩ واط	القدرة
Input Voltage & Frequency	AC220-240V, 50/60Hz	تيار متردد ٢٢٠-٢٤٠ فولت ٥٠/٦٠ هيرتز	الجهد الكهربائي والتردد
IP	IP65	٦٥	درجة الحماية
TA	45°C	٤٥ درجة	درجة الحرارة

COMPONENTS AND TOOLS

المكونات والادوات

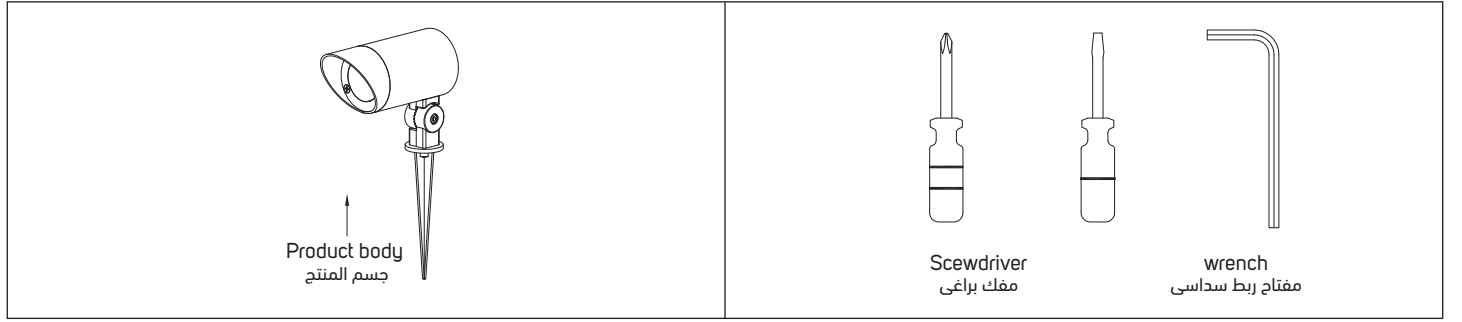

INSTALLATION STEPS

خطوات التثبيت

