

INSTALLATION INSTRUCTIONS

تعليمات التركيب

LED Spike Projector Luminaire

وحدة إضاءة غرس ليد

Attention:

- Luminaire should be installed by professional electrician.
- Check the power switch has been turned off.
- Please read this user guide carefully before installation and keep for future reference.
- The external flexible cable or cord of this luminaire cannot be replaced, if the cord is damaged, the luminaire shall be destroyed.


تنبيهات:

- يجب أن يتم تثبيت وحدة الإنارة بواسطة كهربائي محترف.
- تحقق من إغلاق مفتاح التشغيل.
- يرجى قراءة دليل المستخدم بعناية قبل التثبيت، والاحتفاظ به للرجوع إليه في المستقبل.
- لا يمكن استبدال الكبل أو السلك الخارجي المرن لوحددة الإنارة هذه ، في حالة تلف السلك ، يجب تغيير وحدة الإنارة.

Model	ILS12.5GSLWW01	ILS12.5GSLWW01	الموديل
Power	12.5W	١٢,٥ واط	القدرة
Input Voltage & Frequency	AC100-240V,50/60Hz	تيار متردد ١٠٠-٢٤٠ فولت، ٦٠/٥٠ هيرتز	الجهد الكهربائي والتردد
IP	65	٦٥	درجة الحماية
TA	45°C	٤٥ درجة	درجة الحرارة

COMPONENTS AND TOOLS

المكونات والأدوات

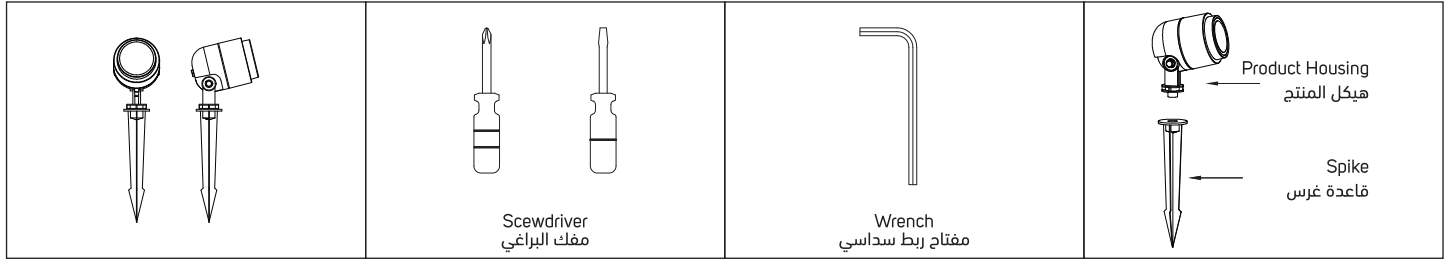

INSTALLATION STEPS

خطوات التثبيت

