

INSTALLATION INSTRUCTIONS

تعليمات التركيب

LED Spike Projector Luminaire وحدة إضاءة غرس ليد

Attentions:


- Luminaire should be installed by professional electrician.
- Check the power switch has been turned off.
- Please read this user guide carefully before installation and keep for future reference.
- The external flexible cable or cord of this luminaire cannot be replaced, if the cord is damaged, the luminaire shall be destroyed.

تنبيهات:

- يجب أن يتم تثبيت وحدة الإنارة بواسطة كهربائي محترف.
- تحقق من إغلاق مفتاح التشغيل.
- يرجى قراءة دليل المستخدم بعناية قبل التثبيت، والاحتفاظ به للرجوع إليه في المستقبل.
- لا يمكن استبدال الكابل أو السلك الخارجي المرن لوحدة الإنارة هذه، في حالة تلف السلك، يجب تغيير وحدة الإنارة.

Model	ILS9GSLWW01	ILS9GSLWW01	الموديل
Power	9W	٩ واط	القدرة
Input Voltage & Frequency	AC100-240V,50/60Hz	تيار متردد ١٠٠-٢٤٠ فولت، ٦٠/٥٠ هيرتز	الجهد الكهربائي والتردد
IP	65	٦٥	درجة الحماية
TA	45°C	٤٥ درجة	درجة الحرارة

COMPONENTS AND TOOLS المكونات والأدوات

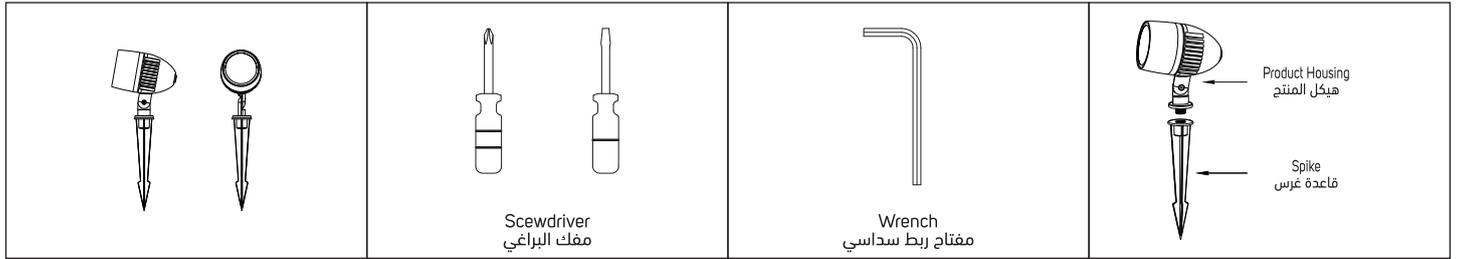

INSTALLATION STEPS خطوات التثبيت

